 


Initial start up

1.) Connect the handset, motor cable and power cable to the control unit,
then connect the power cable to the socket.


2.) **068** flashes, press the button  to reach the required,

use buttons **1** and **2** to set the lowest position in the display and confirm with the button .



3.) **088** flashes, press the button  to reach the required,


use buttons **1** and **2** to set the top position in the display and confirm with the button .

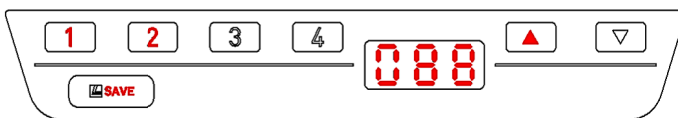


The travel range is programmed.

Reset programming (Delivery status)


Press buttons **1** + **2** +  simultaneously for 10 seconds.

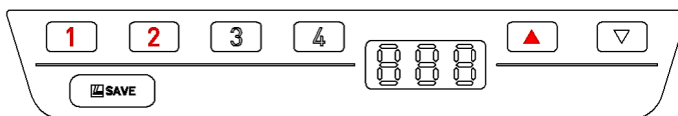

5 5 appears on the display, press button  or  until **5 7** appears on the display.

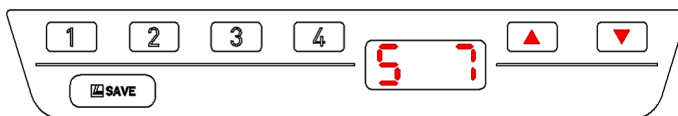

Confirm this with the button .

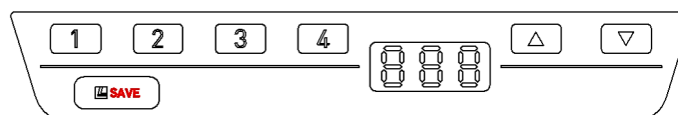

The programming is deleted (delivery status) **068** flashes.

